


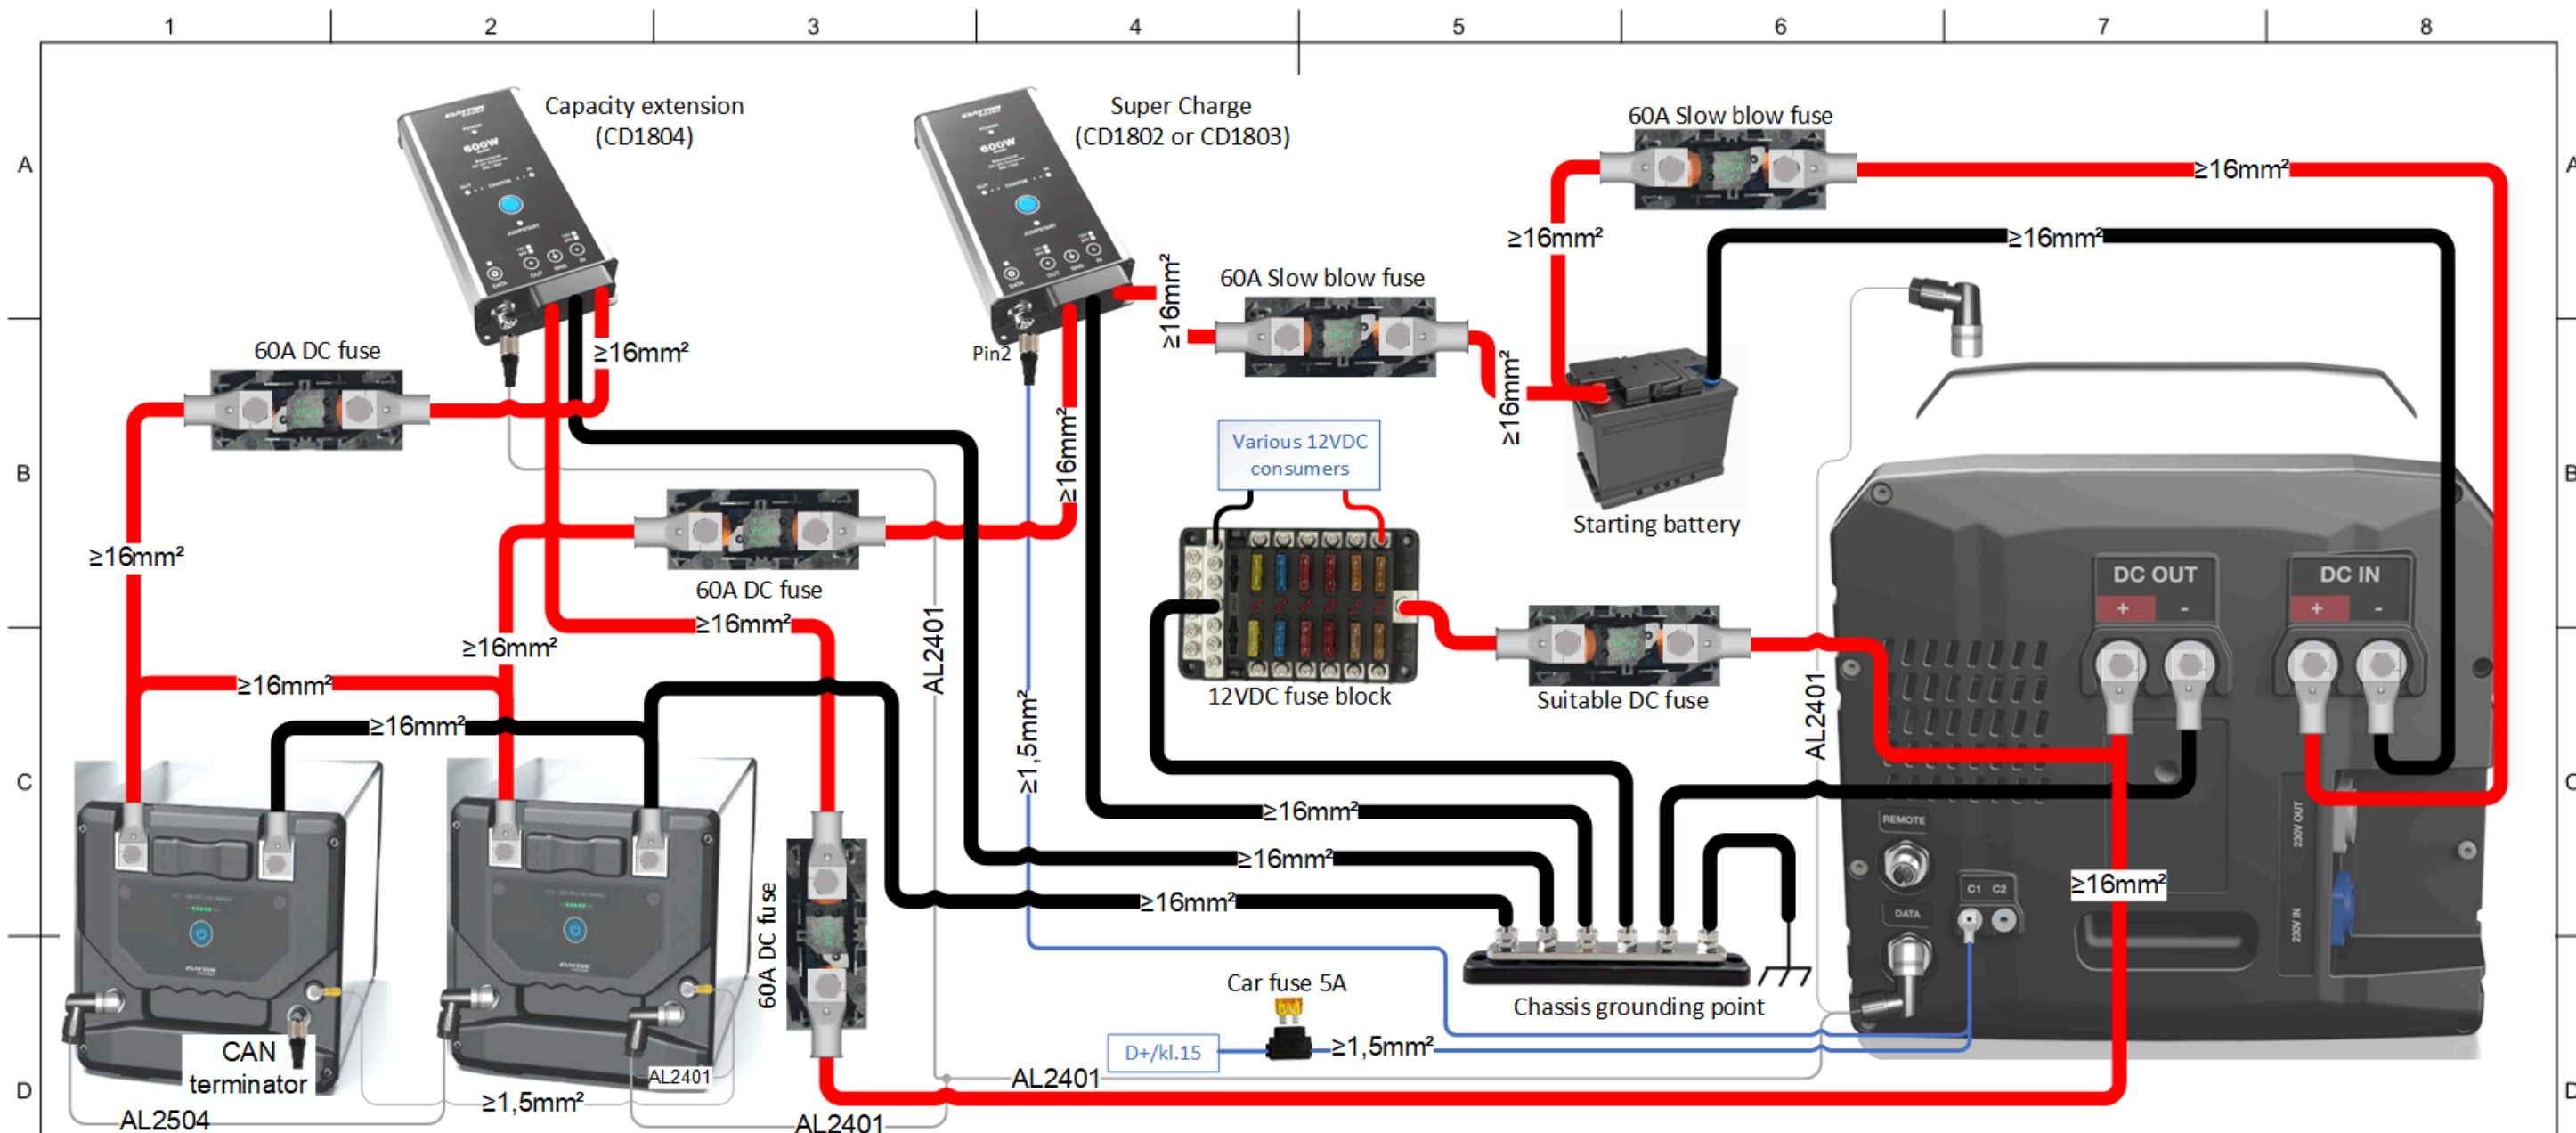

Configuration on LPS:

To enable the capacity extension, you must change a setting on the LPS through its interface/display.
Go to:

Main Menu -> General -> System Configuration

and set the configuration to "Capacity Extension".

This will enable the capacity extension functionality.
To disable the capacity extension functionality select "None".

The DCDC converter will only turn on, when a power transfer is needed between the LPS II and the Li-G4.

The LPS II will always try to keep its internal battery charged, and only charge the Li-G4 when the internal battery SOC is high enough.

Be aware that the positive DC cable should be connected to one Li-G4 and the negative to the other Li-G4, this is to make sure that the power is taken evenly from both batteries.

Output fuse and cable diameter should be done to fit with the size of the load.

Chasis ground cable should be the same diameter as the thickest cable in the installation.

Dept. R&D	Technical reference Installatio Guide	Created by JKW	Approved by MBN
		Document type Application Diagram	Document status Released
		Title Installation Guide LPS II Capacity extension with supercharge and dual Li-G4	DWG No.
		Rev. 2.00	Date of issue 07/10/2026
		Sheet 1/1	